# LBB 4443/00 End of Line (EOL) Supervision Board

www.boschsecurity.com





- ► Loudspeaker line monitoring without additional cabling
- ▶ Open-circuit fault detection
- ► Compatible with 100 V and 70 V loudspeaker lines
- Powering of the supervision-board from the power amplifier
- Communication is not affected by the audio signals on the line

The board monitors the integrity of a loudspeaker line. The boards work together with the LBB 4440/00 Supervision Control Board to monitor the status of the loudspeaker line and all of its branches. The line status is communicated to the LBB 4440/00 via the existing loudspeaker cable.

## **Functions**

The board is mounted inside the case of the last loudspeaker on the loudspeaker line, or inside a separate case. Supervision of branched lines is possible. If a loudspeaker line has multiple branches, a separate LBB 4443/00 is required for the last loudspeaker in each branch. The board detects and reports line faults within 100 s.

#### Interconnections

- Two 30 cm flying leads
- · Two faston connectors

# Certifications and approvals

| Safety    | acc. to IEC 60065 / EN 60065                    |
|-----------|---|
| Immunity  | acc. to EN 55103-2 / EN 50130-4 /<br>EN 50121-4 |
| Emissions | acc. to EN 55103-1 / FCC-47 part 15B            |

| Emergency | acc. to EN 60849 / EN 54-16 /<br>ISO 7240-16 |
|-----------|--|
| Maritime  | acc. to IEC 60945                            |

| Region | Certific | ation     |
|--------|----------|-----------|
| Europe | CPR      | EU_CPR    |
|        | CE       |           |
|        | CE       | COC       |
|        | CE       | CertAlarm |
|        | CE       | DOP       |
|        | GL       |           |
| Poland | CNBOP    |           |

# Installation/configuration notes

The following loudspeakers have a provision for installing a supervision board:

| Ceiling loudspeakers | Column loudspeakers | Sound projectors |
|----------------------|---------------------|------------------|
| LC1-WM06E            | LBC 3210/00         | LBC 3432/02      |
| LC1-UM06E            | LA1-UM20E-1         | LS1-OC100E-1     |

| LC1-UM12E            | LA1-UM40E-1       |  |
|----------------------|-------------------|--|
| LC1-UM24E            | Horn loudspeakers |  |
| LBC 3510/40          | LBC 3403/16       |  |
| LBC 3520/40          | LBC 3404/16       |  |
| LBC 3530/40          | LBC 3405/16       |  |
| Cabinet loudspeakers | LBC 3406/16       |  |
| LBC 3011/41          | LH1-10M10E        |  |
| LBC 3011/51          | LBC 3482/00       |  |
| LB1-UM06E-1          | LBC 3483/00       |  |
| LBC 3018/01          | LBC 3484/00       |  |
| LB1-UM20E-D/L        | LH1-UC30E         |  |
| LB1-UM50E-D/L        |                   |  |
| LB3-PC250            |                   |  |
| LB3-PC350            |                   |  |

### **Technical specifications**

#### Mechanical

| Dimensions (H x W x D) | 78 x 60 x 22 mm (3.0 x 2.3 x 0.8 in)   |
|------------------------|--|
| Weight                 | 70 g (2.4 ounces)  |
| Mounting               | Internally in the loudspeaker<br>An optional mounting bracket,<br>LBB 4446/00 is available |

#### **Environmental**

| Operating temperature | -5 °C to +55 °C (+23 °F to +131 °F) |
|-----------------------|-------------------------------------|
| Storage temperature   | -20 °C to +70 °C (-4 °F to +158 °F) |
| Humidity              | 15% to 90%                          |
| Air pressure          | 600 to 1100 hPa                     |

# **Ordering information**

# LBB 4443/00 End of Line (EOL) Supervision Board

Line supervision slave PCB for connecting to the end of a loudspeaker line or the end of a spur, operates with LBB4440/00 to monitor the integrity of the line. Order number LBB4443/00

#### **Accessories**

#### LBB 4443/00-CN End of Line (EOL) Supervision Board

Line supervision slave PCB for connecting to the end of a loudspeaker line or the end of a spur, operates with LBB4440/00 to monitor the integrity of the line, Chinese version.

Order number LBB4443/00-CN

#### LBB 4440/00 Supervision Control Board

Line and loudspeaker supervision master PCB for mounting in a Praesideo network connected power amplifier, one board is needed per channel. Order number LBB4440/00

# LBB 4440/00-CN Supervision Control Board

Line and loudspeaker supervision master PCB for mounting in a Praesideo network connected power amplifier, one board is needed per channel, Chinese version.

Order number LBB4440/00-CN

#### LBB 4446/00 Set of Supervision Board Brackets (10 pcs)

Aluminum brackets for mounting supervision slave boards in a loudspeaker cabinet or cable box (set of 10 pieces).

Order number LBB4446/00

#### PRS-16MCI Multichannel Interface

Interface to Praesideo network, provides 16 audio outputs with control and supervision to non-network connected basic amplifiers, powered from the Praesideo network or the connected amplifiers, rack unit 2 RU.

Order number PRS-16MCI

#### Represented by:

# Americas:

Americas: Bosch Security Systems, Inc. 12000 Portland Avenue South Burnsville MN 55337, USA Phone: +1-800-392-3497 Fax: +1-800-955-6831 audiosupport@us.bosch.com www.boschsecurity.com

#### Europe, Middle East, Africa:

Bosch Security Systems B.V. P.O. Box 80002 P.O. Box 80002 5617 BA Eindhoven, The Netherlands Phone: + 31 40 2577 284 Fax: +31 40 2577 330 emea.securitysystems@bosch.com www.boschsecurity.com

#### Asia-Pacific:

Asia-Pacific:
Robert Bosch (SEA) Pte Ltd, Security
Systems
11 Bishan Street 21
Singapore 573943
Phone: +65 6571 2808
Fax: +65 6571 2699
apr.securitysystems@bosch.com
www.boschsecurity.asia

#### China:

China:
Bosch (Shanghai) Security Systems Ltd.
201 Building, No. 333 Fuquan Road
North IBP
Changning District, Shanghai
200335 China
Phone +86 21 22181111
Fax: +86 21 22182398 www.boschsecurity.com.cn

#### America Latina:

America Latina:
Robert Bosch Ltda Security Systems Division
Via Anhanguera, Km 98
CEP 13065-900
Campinas, Sao Paulo, Brazil
Phone: +55 19 2103 2860
Fax: +55 19 2103 2862
latam.boschsecurity@bosch.com
www.boschsecurity.com