

# DCT-11S SRS

# TruVolume<sup>™</sup> SCART Volume Leveler

**Operation Manual** 





- TruVolume, SRS and the (0) symbol are trademarks of SRS Labs,Inc.
- TruVolume technology is incorporated under license from SRS Labs, Inc.

#### Disclaimers

The information in this manual has been carefully checked and is believed to be accurate. Cypress Technology assumes no responsibility for any infringements of patents or other rights of third parties which may result from its use.

Cypress Technology assumes no responsibility for any inaccuracies that may be contained in this document. Cypress also makes no commitment to update or to keep current the information contained in this document.

Cypress Technology reserves the right to make improvements to this document and/or product at any time and without notice.

#### Copyright Notice

No part of this document may be reproduced, transmitted, transcribed, stored in a retrieval system, or any of its part translated into any language or computer file, in any form or by any means - electronic, mechanical, magnetic, optical, chemical, manual, or otherwise - without express written permission and consent from Cypress Technology.

© Copyright 2009 by Cypress Technology. All Rights Reserved. Version 1.0 October 2009

#### Trademark Acknowledgments

All products or service names mentioned in this document may be trademarks of the companies with which they are associated.

#### Safety Precautions

Please read all instructions before attempting to unpack or install or operate this equipment, and before connecting the power supply. Please keep the following in mind as you unpack and install this equipment:

- Always follow basic safety precautions to reduce the risk of fire, electrical shock and injury to persons.
- > To prevent fire or shock hazard, do not expose the unit to rain, moisture or install this product near water.
- Never spill liquid of any kind on or into this product.
- Never push an object of any kind into this product through module openings or empty slots, as you may damage parts.
- > Do not attach the power supply cabling to building surfaces.
- > Do not allow anything to rest on the power cabling or allow it to be abused by persons walking on it.
- > To protect the equipment from overheating, do not block the slots and openings in the module housing that provide ventilation.

#### Revision History

Version No	Date	Summary of Change
V1	20091102	<b>Preliminary Release</b>

## **Table of Contents**

1.	Introduction	1
2.	Applications	1
3.	Package Contents	1
4.	System Requirements	1
5.	Features	1
6.	Specifications	2
7.	Operation Controls and Functions	3
	7.1 Top Panel	3
	7.2 Front Panel	3
	7.3 Left Panel	4
	7.4 Right Panel	4
	7.5 Back Panel	4
8.	Connection and Installation	5
9.	Acronyms	6

#### 1. Introduction

The SCART to SCART audio volume processor incorporates SRS TruVolume™ technology that will free you from volume fluctuations when switching TV channels. This device prevents annoying fluctuations from commercials or bursting sounds during action scenes. It always maintains a good volume level, never letting you miss any sounds during quiet conversations or light music. The SRS TruVolume™ SCART Volume processor is definitely the best choice for your sound and viewing pleasure.

#### 2. Applications

- Watching movies/TV
- Listening to music

#### 3. Package Contents

- SRS TruVolume™ SCART volume processor
- 5V DC power adaptor
- Operation Manual

#### 4. System Requirements

- Input source equipment such as DVD/Blue Ray player or a set top box with a SCART output
- Output display such as amplifier, TV or display with SCART cable.

#### 5. Features

- Supports 2-channel audio from SCART input to SCART output port
- Supports line level inputs up to 2Vrms and line level output up to 1Vrms
- Regulates TV / Satellite / Radio broadcast volume level
- Adjusts volume to your preferred hearing level
- An advanced psychoacoustic modeling engine dynamically boosts low and high-frequency content making the entire listening experience come alive, regardless of the audio level
- Quick and easy installation, no software required
- SCART video input is looped through to the SCART output

#### 6. Specifications

Input Port 1 x SCART Output Port 1 x SCART SCART Output Audio Format 1 x RCA Audio Input Impedance 5.1 K  $\Omega$  Audio Output Impedance 220 K  $\Omega$ 

RMS Level  $0.5 \pm 0.05 \text{Vrms}$  (1KHz 0.5Vrms input)

Power Supply DC 5V/1A (US/EU standards, CE/FCC/UL certified)

Human body model: ± 8kV (air-gap discharge)

ESD Protection ± 4kV (contact discharge)

Core chipset: ± 2kV

Dimensions (mm)  $100(W) \times 70(D) \times 20(H)$ 

Weight(g) 90
Chassis Material Plastic
Silkscreen Color White
Power Consumption 3W

Operating Temperature  $0^{\circ}\text{C} \sim 40^{\circ}\text{C} / 32^{\circ}\text{F} \sim 104^{\circ}\text{F}$ Storage Temperature  $-20^{\circ}\text{C} \sim 60^{\circ}\text{C} / -4^{\circ}\text{F} \sim 140^{\circ}\text{F}$ Relative Humidity  $20\sim90\%$  RH (non-condensing)


## 7. Operation Controls and Functions

#### 7.1 Top Panel




(1) SRS TruVolume LED indicator: When the SRS TruVolume turns on the LED will be green, and when it turns off the LED will red.

#### 7.2 Front Panel

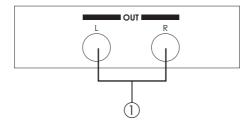


② R/L output: Connect L/R stereo analog audio output to the display audio input or audio equipment.

#### 7.3 Left Side Panel

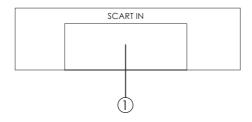


(1) SCART IN: This slot is where you plug in your source device (i.e, set-top-box or DVD/Blu-Ray player) using a SCART cable.

#### 7.4 Right Side Panel

 


① SCART OUT: This slot is where you connect the SCART display using a SCART cable.

#### 7.5 Back Panel

 

- ① DC 5V: This slot is where you insert the 5V DC power supply before plugging the adaptor into an AC outlet.
- ② SRS TruVolume on/off: This switches the SRS TruVolume™ function on or off. When switched on, the SRS TruVolume™ will perform volume control. Once switched OFF, the SRS TruVolume™ will not be operating and the device will bypass the analog audio signal.

## 8. Connection and Installation

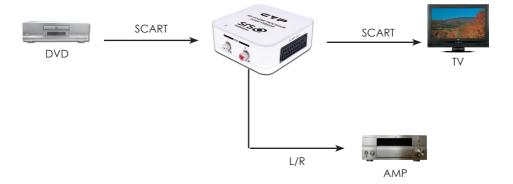



## **Acronyms**

Acronym	Complete Term
SCART	Radio and Television Receiver Manufacturers' Association
SRS	Sound Retrieval System

