



# **INSPECTION CAMERA**

Colour LCD Monitor

# **USER MANUAL**





#### Introduction

Please read this manual carefully before using the Inspection Camera and follow herein instructions to avoid damage caused by improper use.



# Using your inspection camera

ON/OFF: Press and hold the button for 3 seconds


LED brightness adjustment: Press the button to adjust the LED illumination level, until the maximum level is reached. Press again to turn off.

#### **Battery installation**


Open the battery compartment cover.

Insert four AA batteries into the battery compartment. Make sure the polarity of the batteries is correct.

Close the battery compartment cover to secure.

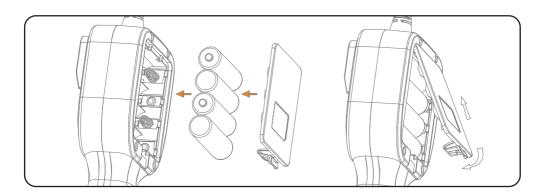


#### **Inclusions**

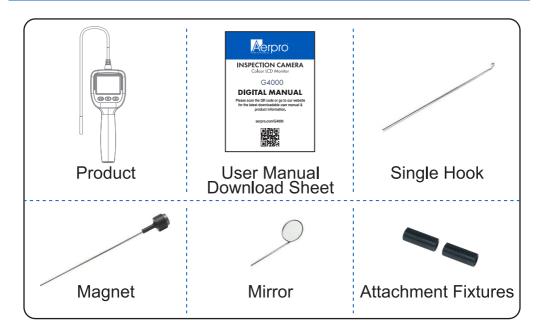

#### **Accessories Installation**

First place the single hook or mirror into the hole on the lens as indicated by the arrow, and then push the attachment fixture.

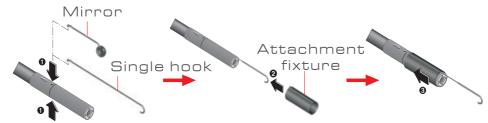

Insert the magnet into the attachment fixture, with the pointed end placed into the hole on the lens as indicated by the arrow, and then tighten the attachment fixture to secure it as shown.



## **Specifications**

Camera Lens Diameter	5.5mm
Snake Tube Length	1 metre
Pixels	640 x 480
Screen Size	2.4" TFT LCD
Field Of View	50°
Waterproof Level	IP 67
Sensor	1/10" CMOS
Manual Dimming	Support
Enlarge/Mirror	Support
Snake Tube Material	Flexible Metal Tube
Battery Type	4 x AA Batteries (not included)

## **Specifications**

If you need assistance setting up or using your Aerpro product now or in the future, call Aerpro Support Australia

TEL: 03 – 8587 8898 FAX: 03 – 8587 8866 Mon-Fri 9am – 5pm AEST

This manual is considered correct at time of printing but is subject to change.

For latest manuals and updates refer to the website.

