 
#### Bluetooth® Reconnect.

If you have Bluetooth reconnect issues, then cycle the power of the speaker: Using the supplied remote button, switch the unit off for 5 seconds and then switch the unit back on and wait for the speaker to tone and then reconnection should occur.


If not, recheck the phone's bluetooth connection, cycle it on/off and repair.

The button on the speaker is not necessary for pairing or repairing or general operation.





**RF Remote** Power Switch

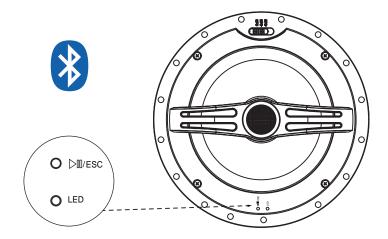

#### **BUTTON:**

The button next to the LED on the Accento-Dynamica fascia is intended for installation servicemen to test for successful connections and is not required for general operation. If currently paired (LED is BLUE) then: Short Button Press: will pause playback, press again commences playback. Long Button Press: will disconnect the current Bluetooth® connection, and the unit is ready to pair again. LED is RED (See pairing instructions).









# Instruction Manual



# **ADS8-100BT**



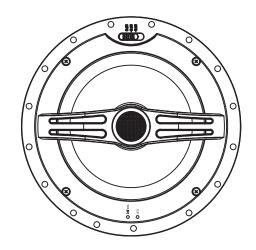

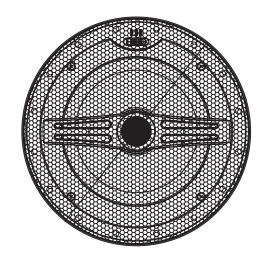

Amplifier RMS:50W X2 Amplifier Maximum Power:100W X2 AC 240V IN, DC 24V 2.5A OUT Bluetooth® VER4.1+EDR Distance 10M

#### WELCOME:

Thank you for your purchase of the Accento-Dynamica Bluetooth® Ceiling Speaker. Operation is completely hands-free and pairing is easy with no pass key required. Once power is connected, simply pair and stream. The pairing name is "ACCENTO".

#### **OPERATION:**

Connect the supplied power pack to the supplied romote power switch module in-line. Connect the module DC Plug to the speaker. Power on the power pack and then activate power by pressing the remote button. The speaker should make a chime.

### **LED Blinking RED:**

The unit will amplify LINE-IN (requires line-level audio to be connected to the RCA inputs), and is ready and waiting for any device to connect to it via Bluetooth®.

#### Pair Your Bluetooth® device.

Turn on your Bluetooth® device and enable Pair to a new device. Pair to "ACCENTO"

#### **LED Constant BLUE:**

Indicates you are now paired. Speaker audio heard remains LINE-IN. Commence streaming from your paired Bluetooth® device.

## **LED Blinking BLUE:**

Indicates the speaker is now streaming Bluetooth® audio from your device. Return to LINE-IN audio.

#### **LED constant BLUE:**

Still paired, but after several seconds of silence, will auto-switch to LINE-IN. To return to Bluetooth® streaming, press play on your Bluetooth® device.

#### End Session.

LED Blinking RED: If you disable your Bluetooth® device, pairing is broken, the ceiling speaker amplifier auto-switches to LINE-IN audio playback and the unit remains waiting for any Bluetooth® connection (See above).

# Bluetooth® Interrupted.

If you leave the Bluetooth® reception area and the speaker loses signal, connection will automatically re-pair & resume once you return to the zone.

#### Bluetooth® Reconnect.

If you have Bluetooth reconnect issues, then cycle the power of the speaker: Using the supplied remote button, switch the unit off for 5 seconds and then switch the unit back on and wait for the speaker to tone and then reconnection should occur. If not, check the phone's bluetooth connection (cycle it on/off).

