


1. Run or Program Mode – SW1
2. Reset Switch – SW2
3. Control Port – J3
4. Connection Port (DSPB-KE) – J1
5. Micro USB Power Port – J2
6. Control Port – J4
7. Programming Port – J11
8. POT4: Stereo Gain
9. POT3: Stereo High-pass Adjustment
10. POT2: Sub Low-pass Adjustment
11. POT1: Sub Gain

SW1	MODE	FUNCTION
①	RUN	Audio Output
②	PROG	Programming

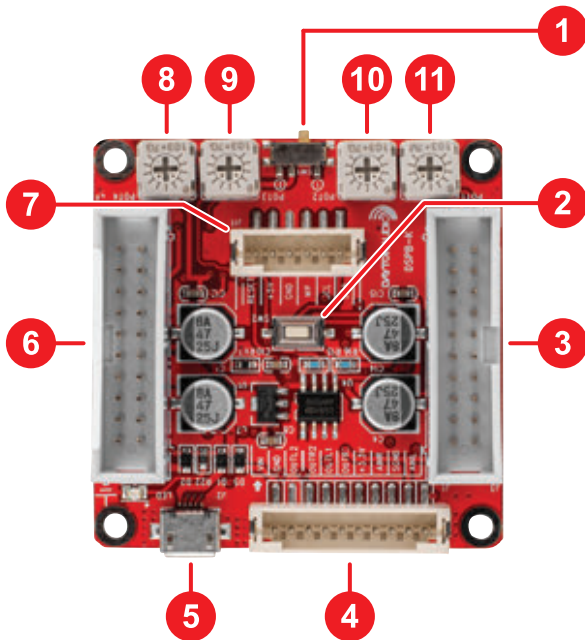

- |                                  |                            |
|----------------------------------|----------------------------|
| 1. Connection Port (DSPB-K) – J4 | 6. RCA Out Sub – J10       |
| 2. RCA Out Left – J9             | 7. Audio Input Header – J3 |
| 3. 3.5mm Output – J7             | 8. RCA Input Right – J5    |
| 4. RCA Out Right – J6            | 9. 3.5mm Input – J1        |
| 5. Audio Output Header – J8      | 10. RCA Input Left – J2    |

