
& brocare,

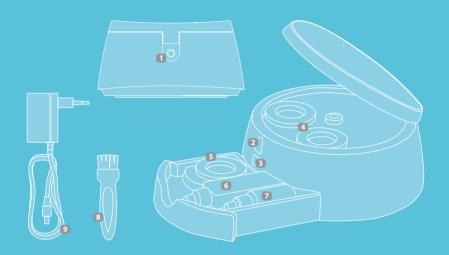

Product Information

- Power socket 2 Open cover plate button 3 Power button 4 Buffing pads
- Repairing pads and Cleaning pads Cleaning Fluid Repair fluid
- 8 Mini brush 9 Power adapter



General Information

Specifications

- Power Source: DC 12V 500mA
- Dimension: R160mm X H76mm
- · Weight: 470 w/o Power Adapter

Accessories

- Buffing pads (One pair) (Pink)
- Repairing pads (One pair) (Yellow)
- Cleaning pads (One pair) (Blue)
- Cleaning fluid (20cc bottle)
- · Repair fluid (10cc. bottle)
- Mini brush
- Power adapter

Caution

- Do not press the power button when no disc is placed inside the unit
- Refrain from operating the unit continuously for more than 30 minutes.
- Refrain from adding more than 2 drops of the repair fluid onto the repair pads.

Instruction

Make sure the power adapter is securely plugged to the main body's power socket.

Step 1 • Buffing

• Open the cover plate, place buffing pads (pink color) into the left and right side of the mounting shaft • Insert the disc, then press power button. The process will stop automatically after 2 to 3 minutes, open the cover plate and retrieve the disc to go to Step 2.

Step 2 • Repairing

Step 3 • Cleaning

① Open the cover plate, place cleaning pads (blue color) into the left and right side of the mounting shaft. Add 2 small drops of cleaning fluid (20cc bottle) on the right side, and then insert the disc. Then press power button ② After the process stops automatically, retrieve the disc to finish the process ③ If still not satisfied with the result, repeat the procedure until best results achieved.

& blocale,

Note

- This unit can return damaged disc back to readable and writable condition, though it will not erase any physical scars or scratches present.
- During the repairing process, there maybe circular marks on the disc; this is perfectly normal condition and will not damage the disc.
- If the disc is faulty due to its original production, this unit will not repair it.
- If the disc is scratched into the inner foil layer, this unit will not repair it.
- Working cycle (Buffing and Repairing): About 6 minutes.
- The whole set of the pads and fluids can be used for 50 times.

