



RFK1003

When powered on, the room temperature will be displayed on the main screen indicated of the display panel and is measured via the thermometer probe on the back of the unit

1. Press **"Set"** to indicate the temperature control and use the Arrow buttons to select the desired temperature limit.
2. Press **"Rst"** to go back to the main screen with the desired temperature limit set.

Symbol	Function	Setup Range
HC	Heating/Cooling	-13° - 90° C
d	Temperature return difference	1° - 15° C
CA	Temperature calibration	0° - 5° C
Pt	Delay time	0 - 5mins
HS	Upper limit	28° - 120°
LS	Lower limit	-50° - 28°

3. From the main screen press and hold **"Set"** for 6 seconds to access the function menus and use the arrows to navigate to the different functions indicated by the symbol.
 4. Press the **"Set"** button to go into the function setup and select the desired range using the arrow buttons.
 5. Once you find the desired value, press **"Rst"** to go back to the main screen and the value will be set.
- If any functions need to be adjusted, repeat steps 3-5 while selecting the desired symbol in the function menu.

