

SeKi

Care



Programming Master

Step 1

Press buttons "AV" and "VOL -" at the same time.

Hold both of the keys for at least 5 seconds until the corresponding indicator lights up.

The learning system is on now.

Step 2

Hold the sending end of the established remote aiming at the receiving end of SeKi. (distance 2-5cm)

Step 3

Press the button of SeKi remote control you want to program. The indicator will flash 2 times.

Step 4

Press the targeted button of the original remote control. When receiving the correct data, LED will flash 2 times and then light.

Step 5

To learn other buttons repeat steps 3 + 4 until the end of all learning.

Step 6

When learning is completed, press button "AV" to exit learning state.

You are done and can now use your SeKi Care.



Programming Slave

Step 1

Put batteries into the programmer and switch it on. LED display, OK and FAIL indicator will flash.

Step 2

Press SELECT key until display shows „32“. Please press ENTER. OK and FAIL indicators will be off.

Step 3

Connect the already programmed SeKi Care remote via mini USB cable (USB jack in the battery case) with Master jack of the programmer and the new SeKi Care with Slave jack.

Step 4

Press ENTER to start copying.

Step 5

OK indicator will light when copying was successful. If FAIL indicator will light on, copying failed. In this case, please unplug both remotes and repeat programming, starting from step 3.

Step 6

Unplug both remotes and switch off the programmer. You are done. Both SeKi remotes are having same codes now and can be used.

For further information or for trouble-shooting please visit our website at www.my-seki.com