

SeKi One

Schnell, einfach,
kinderfreundlich, intelligent

- Universal Fernbedienung für AV-Geräte
- sehr leicht zu reinigende Folientastatur
- verschließbares Batteriefach
- Einfache und schnelle Erstellung eines weiteren Duplikates, durch Kopie der Codes von einer bereits programmierten SeKi One
- Auch ideal zum Einsatz in Krankenhäusern und Pflegeeinrichtungen
- Behält die Einstellungen bei Batteriewechsel
 - 2 Jahre Garantie
 - Batterien nicht enthalten


Bei Fragen oder weiterer Hilfestellung besuchen Sie
unsere Internetseite www.my-seki.com



WEEE-Reg.-Nr. DE 60722497

- Universal remote control for audio-video devices
 - very easy to clean plastic foil keypad
 - lockable battery compartment
- easy to copy by using OneKey master-slave-copy
 - perfect for hospitals and special-care homes
 - keeps the settings during battery change
 - 2 year warranty
 - batteries not included

If you have further questions or need additional
guidance please visit our website www.my-seki.com

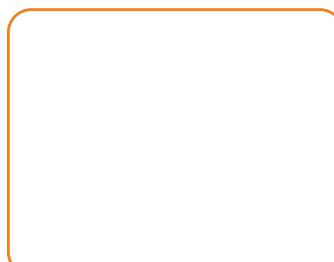

SeKi

Programming SeKi One



Step 1

To program the SeKi One, press the "On / Off" and "Vol +" buttons simultaneously and hold down these two buttons for 5 seconds. Release the buttons when the LED starts to light continuously. The SeKi One is now in learning mode.

Step 2

Hold both remote controls so that the transmitting end of the previous remote will point to the receiving end of the SeKi One. (Distance 2-5 cm)

Step 3

Press the button to be programmed on the SeKi One remote control. The LED flashes to confirm and awaits the signal from the original remote control.

Step 4

Now press the corresponding button on the original remote control. When correctly received, the LED flashes three times briefly and then lights up.

Step 5

To learn other buttons repeat steps 3 + 4 until the end of all learning.

Step 6

When all buttons have been programmed, first press the "on / off" button and the "VOL" button at the same time to complete the learning process.

If no key is pressed within 15 seconds during the learning process, the process is saved and terminated.

Now your SeKi One is ready for use!



Speedy, easy,
kids friendly, intelligent



OneKey Duplication SeKi One

Step 1

Insert batteries into both SeKi One remote controls. **Remote A** is the already trained SeKi One, **Remote B** is the still "empty" SeKi One.

Step 2

Start with the **Remote B**: Press and hold the "On / Off" and "CH-" buttons simultaneously for 5 seconds. Release them when the status LED is lit. The learning mode is now active.

Step 3

Hold both remote controls so that the transmitting end of the previous remote will point to the receiving end of the SeKi One. (Distance 2-5 cm)

Step 4

On the **Remote A**, press and hold the "On / Off" and "CH +" buttons simultaneously for 5 seconds. Release the two buttons when the **Remote A** status LED is lit.

Step 5

When the status LEDs of both remote controls start flashing, the programming is transmitted. If the indicator light of the two remote controls flashes three times and then goes off, copying is completed.

Both SeKi One remote controls now have identical codes and are ready for use.

www.my-seki.com



www.my-seki.com