

Tips: How to Adjustable Current Without Load?

1

Adjust the voltage to below 5V



2

Let the positive and negative output-
terminals of the output line touch-
(short circuit), then adjust the current

