


PC REMOTE CONTROLLER

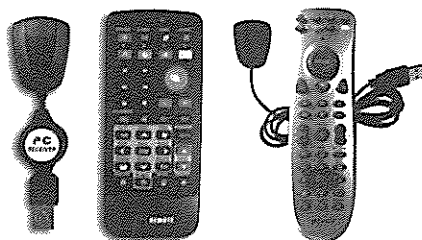

This product is a computer remote controller with strong function. with it, listening the music, watching the movie, website scan will become more convenience.

Set hotkey:

A, B, C, D key: Set hotkey

Each key can open 3 procedures from the definition.

Hotkey	Hotkey 1	Hotkey 2	Hotkey 3
A	Ctrl + Alt + A	Ctrl + Alt + 1	Ctrl + Alt + F1
B	Ctrl + Alt + B	Ctrl + Alt + 2	Ctrl + Alt + F2
C	Ctrl + Alt + C	Ctrl + Alt + 3	Ctrl + Alt + F3
D	Ctrl + Alt + D	Ctrl + Alt + 4	Ctrl + Alt + F4


For example : select setting hotkey of music player music player software/ right key/attribute/short/ shortcut/input A in the fast key column in changes into the Ctrl+Alt+ A /enter

Numlock key:

4 functions shift : 1, Cursor/2, Letter/3, Capital letter/4, Typewriting

Text input : typewriting is similar to mobile phone's.

For example : input "3G", first press key "numlock" shift to letter input, press key "3" 4 times continuously, then press key "4"

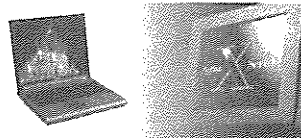

PC remote controller Key note:

Key	Function	Key	Function
	Power	VOL+	Vol +
	E-mail	VOL-	Vol -
	Internet	PgUp	Page Up
	Close Windows	PgDn	Page down
	Hotkey A		Mute
	Hotkey B		My PC
	Hotkey C		Backspace
	Hotkey D	Tab	Tab key
Mouse	Mouse		Up arrow
L	Mouse left key		Down arrow
R	Mouse right key		Left arrow
	Move windows		Right arrow
	Previous	Enter	Enter
	Next		Open
	Play/pause		Start
	Backward	Esc	Esc
	Forward		Numlock
	Stop		Switch windows
			Desktop

The main parameter:

- Receive Interface: USB Interface
- No need driver
- Wireless mouse functions
- character and english letters input
- Support software: WMP, Realplayer, KMPlayer, TTPay, WinDVD, PowerDVD
- Product size: 2.8cm × 18.5cm × 5.1cm
- Remote battery: 2 unit of AAA
- The infrared ray control from a distance
- Remote range: 18M
- Application: Windows 2000 and above operate system
 - Windows 7
 - Windows XP
 - Windows MCE
 - Windows VISTA

Maintenance and repairs

By the right direction load cell polarity; do not mix old and new batteries or different types of batteries. Please removed the batteries if you do not use it for along time, removed batteries, in order to the components; If the remote is not insensitive, Please timely replace batteries.

18m
Distance

