4 Channel 12VDC 5A Power Supply

Model: PS12V5A4CH





Overview

The PS12V5A4CH is a 4-channel 5-Amp power supply. While normally used in CCTV installations, it is suitable for a wide variety of both CCTV and access control applications. It features adjustable output voltage and built-in 6.8-Amp overcurrent protection.

Product Highlights

- 4-Channel 5-Amp power distribution
- Can be mounted with the bracket for easy access and reduced power cord clutter
- Universal input voltage: 100~240 VAC
- Adjustable output voltage: 12~13.8 VDC
- Built-in 6.8-Amp overcurrent protection
- High voltage and overcurrent protection
- LED Power indicator

Parts List

- 1 x Power supply
- 1 x Power cable
- 1 x Mounting bracet
- 2 x Mounting screws

Specifications

Model	PS12V5A4CH
Outputs	4
Total Supply Current	5A
Max. Output Power	60W
Over Current Protection	12VDC/6.8A
Output Voltage	12~13.8 VDC
Input Fuse	3.15A@250 VAC
Input Voltage	100~240 VAC
Dimensions	150 x 55 x 33mm
Weight	380g
Operating Temperature	-10° ~ 45°C







Installation

- 1. Find a suitable location to install the power supply. The power supply should be installed out of sight, and in a place protected from weather and high humidity. The power supply must have adequate ventilation. Insufficient ventilation may cause overheating and damage could result.
- 2. Attach the power supply to a wall or desk using the included mounting bracket. If possible, mount the power supply sideways or with the terminals facing down so they do not collect dust.
- 3. Connect the main power cable to the power supply.

Wiring and Adjusting Voltage

- 1. Connect cameras and other devices to the power outputs, while observing correct polarity as shown in Figure 1. To minimize voltage drop, use 18-gauge or larger wire. **WARNING:** Always test output voltage before connecting devices to the power supply.
- 2. If voltage drop is large, adjust the output voltage potentiometer as shown in Figure 2.



Sample Installation

