



DOUBLE BRICK WALL INSTRUCTIONS


Drill a 25mm hole through the internal brick wall

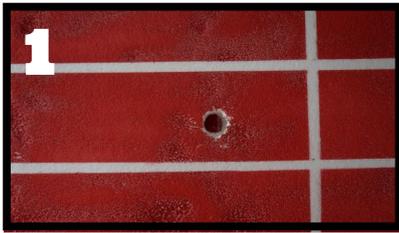


Drill for 2 seconds into external brick wall to create counter-sunk indentation

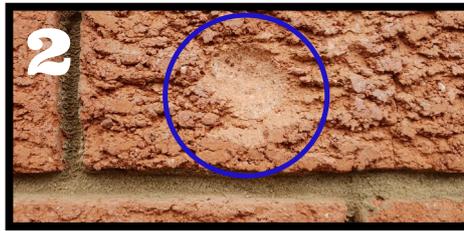

Slide Faceplate along keyway until it stops

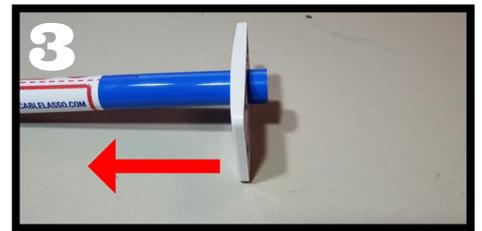


Insert tool into brick wall until face plate meets wall

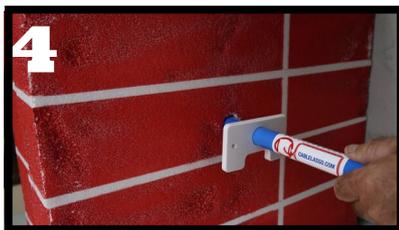


PRODUCT WARNING

Do not use this product near live wires. This product is not a toy please keep out of reach of children. Contains sharp objects and small parts that might be a choking hazard.


Gently insert band into tool.

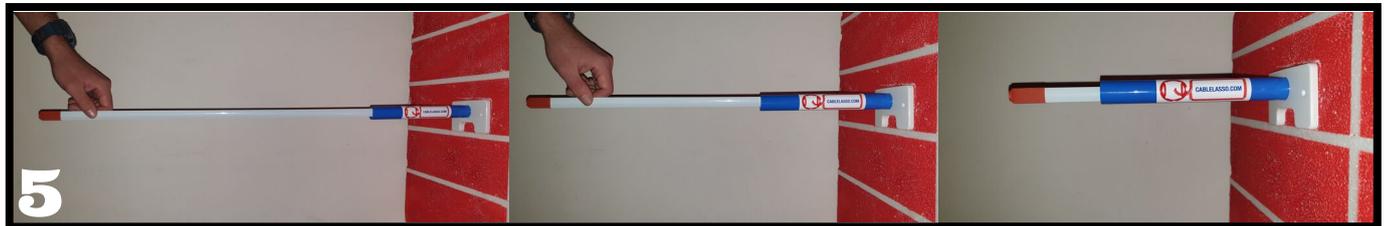

Drop weighted stringline until its 400mm past the band

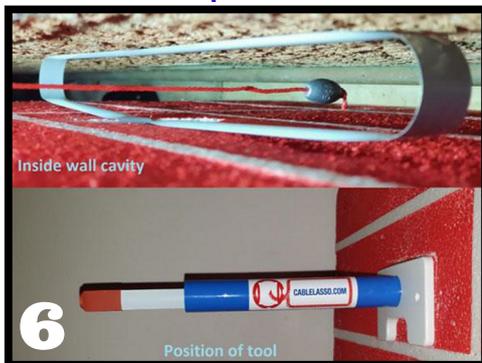

Pull Band out capturing stringline

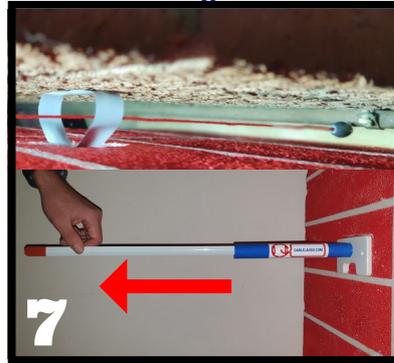

Continue to pull band out to reveal stringline weight

