


# CPA-4

## Video Pattern Generator

### Quick Guide

*Operation Manual*

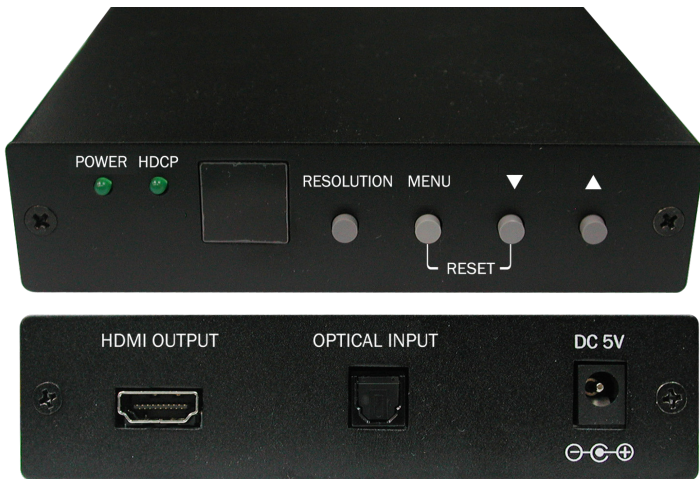

CPA-4

# TABLE OF CONTENTS

<b>1. Features and Specifications</b> .....	3
Features .....	3
Specifications .....	3
<b>2. Overview of the Remote Control</b> .....	4
<b>3. Operation Controls and Functions</b> .....	5
3.1 Front Panel .....	5
3.2 Rear Panel .....	6
<b>4. Pattern table</b> .....	6
<b>5. Using the OSD main menu</b> .....	9
5.1 Pattern .....	9
5.2 Audio source .....	9
5.3 HDCP setup .....	10
5.4 EDID analysis .....	10
5.5 Resolution .....	11
5.6 Signal type .....	11
5.7 Information .....	11

# **1. Features and Specification**

## **Features**


- Supports HDCP signal verification pattern.
- OSD menu operation
- Remote control

## **Specifications**

- HDMI v1.2, HDCP1.1 and DVI1.0 compliant
- HDMI Frequency Bandwidth: 1.65Gbps (single link).
- Output Resolution:  
PC Mode: VGA60 / SVGA60 / XGA60 / SXGA60 / UXGA60 / WUXGA60  
HD Mode: 576p50 / 480p60 / 720p50 / 720p60 / 1080p50 / 1080p60
- Output Signal: DVI / HDMI / Auto Detect
- Patterns: 8 Groups with 36 patterns
- Audio Source:  
1. Internal 1 kHz Sinewave 48kHz sampling rate  
2. External optical input.
- HDMI Audio Output:  
1. From internal 1KHz Sinwave and converted to 8 channels LPCM, 48 KHz Sampling rate.  
2. From external optical input.
- EDID Supports: VESA EDID v1.3 and EIA/CEA 861 Version 3.
- Input: optical x1
- Output: HDMI female port (type A connector) x1
- Power Supply: 5VDC/2A power supply (AC 90~240V).
- Weight(g): 334
- Dimensions(mm): 125(W) x 125(D) x 30(H)


## 2. Overview of the Remote Control

- ① . OSD menu operation
- ② . PATTERN menu shows up.
- ③ . Select a group of patterns.
- ④ . Do EDID analysis.
- ⑤ . Show system's infomation
- ⑥ . Output Resolution Hot keys:  
Press the Hot Keys for output resolution:  
VGA60 / UXGA60 / WUXGA60 / 576p50  
/ 480p60 / 720p60 / 1080p60
- ⑦ . HDCP turns on or off.
- ⑧ . Select audio source - internal 1kHz sine wave or external optical
- ⑨ . Select output signal type - DVI , HDMI or Auto-Detect
- ⑩ . Reset system.

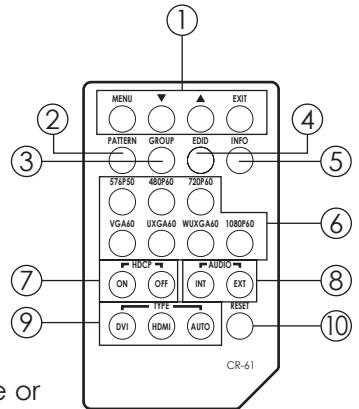


### 3. Operation Controls and Functions

#### 3.1 Front Panel

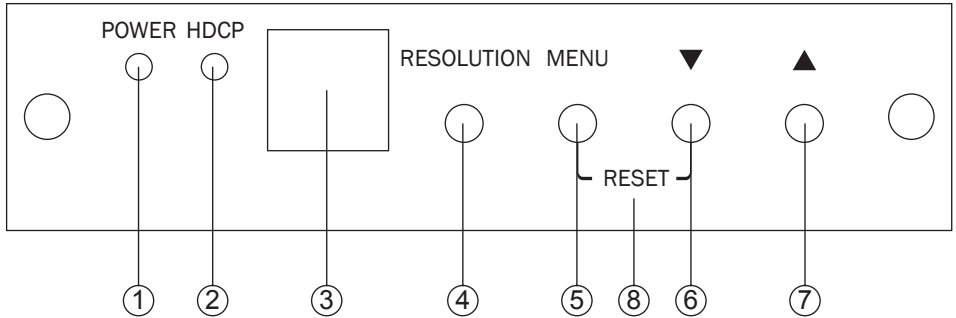

- ① . Power ON/OFF indicator.
- ② . HDCP ON/OFF indicator: Press [HDCP ON]/[HDCP OFF] to switch HDCP ON/OFF.
- ③ . Remote control sensor.
- ④ . Resolution: Switch resolution among VGA60→SVGA60→XGA60→SXGA60  
→UXGA60→WUXGA60→576p50→480p60→720p50→720p60  
→1080p50→1080p60
- ⑤ . MENU (Enter): Press to view the OSD menu or press to enter the functions.  
When OSD Menu shows up, the HDCP function will turn off by the system. After the OSD turn off, the HDCP function turn it on automatically.
- ⑥ . ▼: Press to move the cursor down or switch to next pattern.
- ⑦ . ▲: Press to move the cursor up or switch to previous pattern.
- ⑧ . RESET: Press to return to factory setting.

### 3.2 Rear Panel

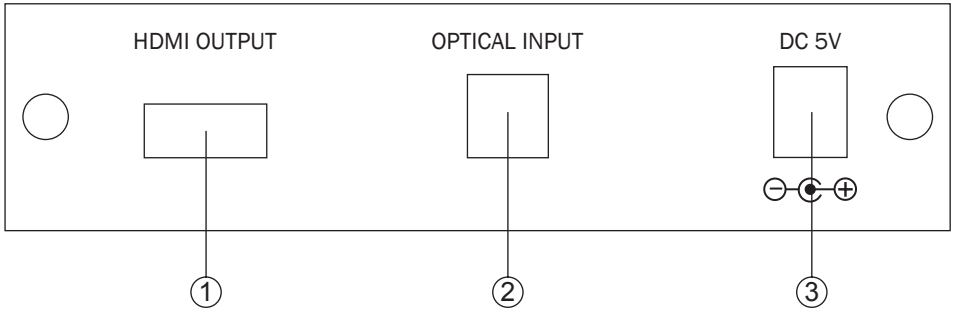

- ① HDMI OUTPUT: HDMI/DVI output.
- ② OPTICAL INPUT: Connected external S/PDIF audio source.
- ③ DC 5V/2A: Power input.

### 4. Pattern table

CPA-4 has 8 groups with 36 patterns.

GROUP	PATTERN	COMMENT
Color Bar		H/V color bars
Application		
The color bar pattern in fact provides sufficient information for a good overall check on color performance. This includes the checks on burst keying, subcarrier regeneration, RGB amplifiers, the delay chrominance/luminance and saturation check.		
Grey Scale		step8 / 16 / 32
Application		
The Greyscale pattern is used to locate faulty linearity of the video amplifier or greyscale setting. Nonlinearities mainly result in a compression of the white level.		

Purity		Purity Color White, Blue, Red, Magenta, Green, Cyan, Yellow, Black
--------	--	--

**Application**

The red and green patterns are most frequently used for checking color purity. In a correctly adjusted receiver, each electron beam will strike only one set of color dots or stripes on the screen. If the red pattern is selected only this color should be visible; the presence of any other color is an indication that color purity needs adjustment.


The green pattern provides a purity check for three in-line tubes. In addition the pattern serves as a reference to locate any geometrical distortions in these picture tubes. In the in-line tubes, the guns are in a horizontal position and the green gun is located in the center.

Blue as well as the complementary colors are often used to check the color performance.

The Patterns (mainly RED) are used to ensure that there is no interference between the sound and chroma carrier.

In addition to the primary and complementary colors 100% white can be selected as well as black pattern with color burst to check.


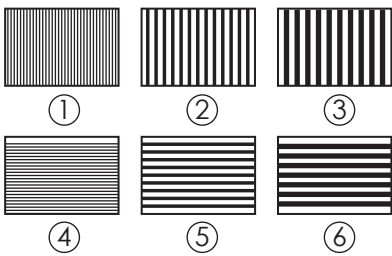


Furthermore purity patterns are used for measuring unwanted amplitude and phase modulation of the subcarrier, AM and PM noise as it occurs with VCRs.

Black / White Line		H/V B/W line
--------------------	--	--------------

**Application**

The vertical pattern serves for a quick check of color monitor's horizontal bandwidth and phase behavior of a video transmission. Also, verify video amplifier and color temperature.

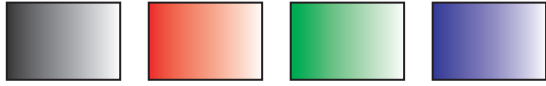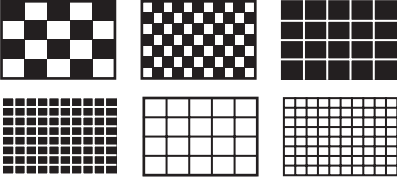The horizontal pattern serves for a quick check of color monitor's vertical bandwidth and phase behavior of a video transmission. Also, verify video amplifier and color temperature.

Gradual		Gradual Black/White, Red/White, Green/White, Blue/White
Application		
<p>Checks and adjustment of decoders, especially video de-emphasis and bell filters (cloche). In the receiver, after the antibell filter, the chrominance signal should have the same amplitude in the active video part.</p>		
Grid		Checker Board, Grid, Inverse Grid
Application		
<p>This pattern is mainly used for checking and aligning dynamic and corner convergence of TVs or monitors.</p>		
HDCP Pattern		HDCP test and link-integrity check
Application		
<p>To test DVI and HDMI receivers with HDCP. All DVI and HDMI options, including analyzer options, support HDCP production keys if the HDCP option is installed.</p>		
Others		H Pattern, Dot Pattern, Cross Center, Motion
Application		
<p>The H pattern is mainly used for checking aligning dynamic The Dot pattern is used for checking and adjusting the static convergence. The screen should contain pure white dots. The presence of colored dots points to faults in focusing and convergence. The Cross center is present in the corners of the screen to check and adjust the geometric distortion. The Cross center is ideal to center TV monitors and TV screens and alignment of picture height/picture width. Furthermore, it is used to check the deflection linearity and the pincushion correction. The Motion pattern is to check the correct digital video processing, especially AD conversion of modern TV equipment. When motion pattern ON, the HDCP function will turn off by system, After the user switch to other patterns, the HDCP function turn it ON automatically.</p>		



## 5. Using the OSD main menu

Press [MENU] to display main menu.

### 5.1 Pattern

Press [▲/▼] to move the cursor and then press [Menu] to enter the pattern mode. There are 8 different pattern groups; you can move the cursor and press [Menu] to enter each pattern group. Press [↑/↓] to select pervious/next pattern.

#### MANI MENU

PATTERN  
AUDIO SOURCE  
HDCP SETUP  
EDID ANALYSIS  
RESOLUTION  
SIGNAL TYPE  
INFORMATION  
EXIT



#### PATTERN

COLOR BAR  
GRAY SCALE  
PURITY  
BLACKWHITE LINE  
GRADUAL  
GRID  
HDCP PATTERN  
OTHERS  
EXIT

Press [Exit/Menu] to return to pervious page. Or press [Exit/Menu] twice to return to the Main menu.

### 5.2 Audio source

Press [▲/▼] to move the cursor and then press [Menu] to enter the audio source. After the audio source been selected press [Menu] to confirm the selection.

#### MANI MENU

PATTERN  
AUDIO SOURCE  
HDCP SETUP  
EDID ANALYSIS  
RESOLUTION  
SIGNAL TYPE  
INFORMATION  
EXIT



#### AUDIO SOURCE

INTERNAL  
EXTERNAL  
OFF  
EXIT

Press [Exit/Menu] to return to the Main menu.

### 5.3 HDCP setup

Press [▲/▼] to move the cursor and then press [Menu] to enter the HDCP setup. After the HDCP setup been selected press [Menu] to confirm the selection.

#### MANI MENU

PATTERN  
AUDIO SOURCE  
HDCP SETUP  
EDID ANALYSIS  
RESOLUTION  
SIGNAL TYPE  
INFORMATION  
EXIT



#### HDCP SETUP

OFF  
ON  
EXIT

Press [Exit/Menu] to return to the Main menu.

### 5.4 EDID analysis

Press [▲/▼] to move the cursor and then press [Menu] to enter the EDID analysis. After enter EDID analysis sub-menu, the user can move the cursor and then press [Menu] to check the EDID information.

#### MANI MENU

PATTERN  
AUDIO SOURCE  
HDCP SETUP  
EDID ANALYSIS  
RESOLUTION  
SIGNAL TYPE  
INFORMATION  
EXIT



#### EDID ANALYSIS

BK0. Binary List  
BK0. Vendor / Product Id  
BK0. Basic Display Barameters  
BK0. Color Characteristics  
BK0. Established Timings  
BK0. Standard Timings  
BK0. Detail Timings  
BK1. Binary List  
BK1. DTV Monitor Support  
BK1. Video Data Block  
BK1. Audio Data Block  
BK1. Other Data Block  
BK1. Detail Timings  
EXIT

Press [Exit/Menu] to return to pervious page. Or press [Exit/Menu] twice to return to the Main menu.

### 5.5 Resolution

Press [▲/▼] to move the cursor and then press [Menu] to enter the resolution setup. After the resolution setup been selected press [Menu] to confirm the selection.

#### MANI MENU

PATTERN  
AUDIO SOURCE  
HDCP SETUP  
EDID ANALYSIS  
RESOLUTION  
SIGNAL TYPE  
INFORMATION  
EXIT



#### RESOLUTION

PC Mode: VGA60 / SVGA60 / XGA60  
SXGA60 / UXGA60 / WUXGA60  
HD MODE: 576p50 / 480p60 / 720p50  
720p60 / 1080p50 / 1080p60  
EXIT

Press [Exit/Menu] to return to the Main menu.

### 5.6 Signal type

Press [▲/▼] to move the cursor and then press [Menu] to enter the signal type setup. After the signal type been selected press [Menu] to confirm the selection.

#### MANI MENU

PATTERN  
AUDIO SOURCE  
HDCP SETUP  
EDID ANALYSIS  
RESOLUTION  
SIGNAL TYPE  
INFORMATION  
EXIT



#### SIGNAL TYPE

DVI  
HDMI  
AUTO DETECT  
EXIT

Press [Exit/Menu] to return to the Main menu.

### 5.7 Information

Press [▲/▼] to move the cursor and then press [Menu] to show system information. The system default status as below:

#### MANI MENU

PATTERN  
AUDKO SOURCE  
HDCP SETUP  
EDID ANALYSIS  
RESOLUTION  
SIGNAL TYPE  
INFORMATION  
EXIT



#### INFORMATION

RESOLUTION. 720P60  
RATTERN. Color bar  
AUDIO. internal  
HDCP. OFF  
SIGNAL TYPE. AUTO DETECT  
DVI (depends on EDID of display device.)  
EXIT

Press [Exit/Menu] to return to the Main menu.

Note: After the user change the system status, the information status will changed.



**CYPRESS TECHNOLOGY CO., LTD.**  
Home page: <http://www.cypress.com.tw>

20080304 MPM-CPA4